




MATERIALS

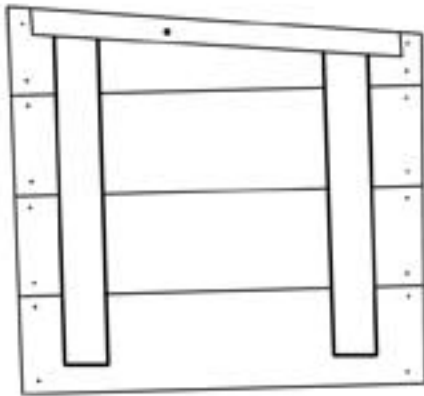


sides
(2)

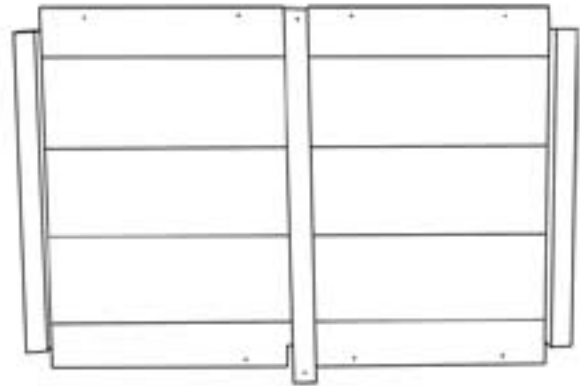

bottom
(1)

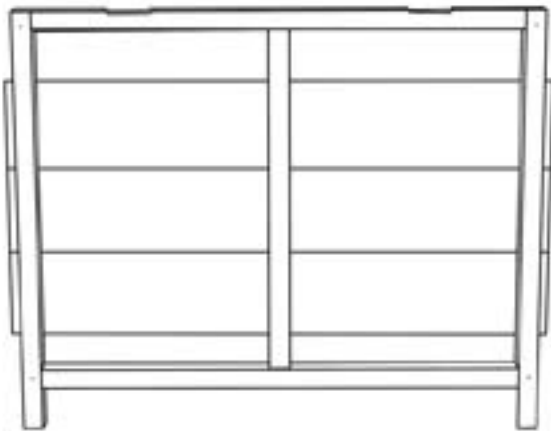

back panel
(1)

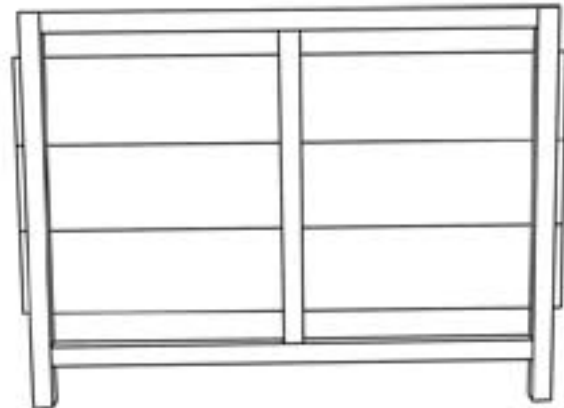

front panel
(1)



top back
(1)



top front
(1)



bottom front
(1)




bottom sides
(2)



T305 DIVOT MIX CONTAINER INSTRUCTIONS

STEP 1:

Slide the front and back panels into the slot of the bottom panel. Secure using (1) 3" screw into each leg and (8) 2" screws into the top of the bottom panel as shown in drawing.

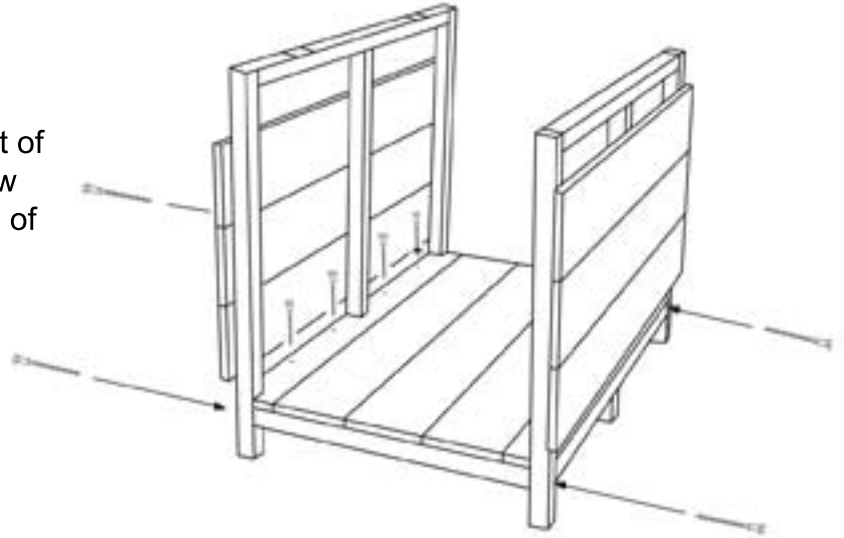


STEP 2:

Install the (2) side panels using (2) 3" screws and (16) 2" screws for each panel.

STEP 3:

Attach the top and bottom slats to the front of the box using (12) 2" screws.

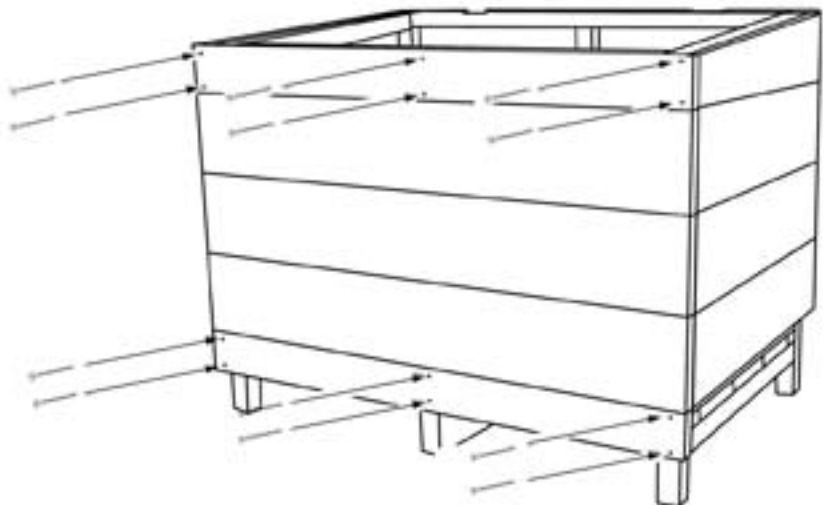



T305 DIVOT MIX CONTAINER INSTRUCTIONS

STEP 4:
Attach the top and bottom panels to the back of the box using (12) 2" screws.



STEP 5:
Attach the lid using (8) 1 1/2" bolts.

STEP 6:
Attach the lid chains to the inside of the box using (2) 1 1/2" bolts.

STEP 7:
There are (2) 4" screws that need to be screwed into the center support of the box. You will see the predrilled holes that these screws need to go into after you have flipped the box over.
**picture not shown*

